


How to Use


Unfolding the tripod

Press the "Push" button the base to pop out the legs.
No fiddly bits here. Just don't force them open,
it's not made for that.

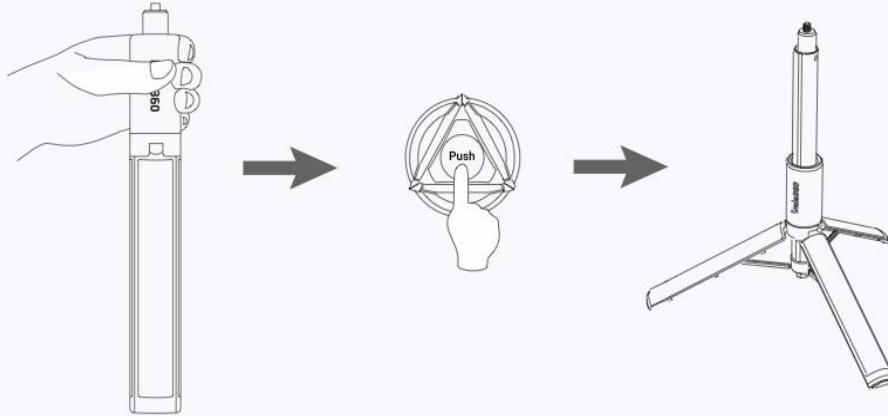

Folding back up

Grip around the Insta360 logo and push to retract the selfie stick.
The legs will fold by themselves, just be careful not to nip your skin.

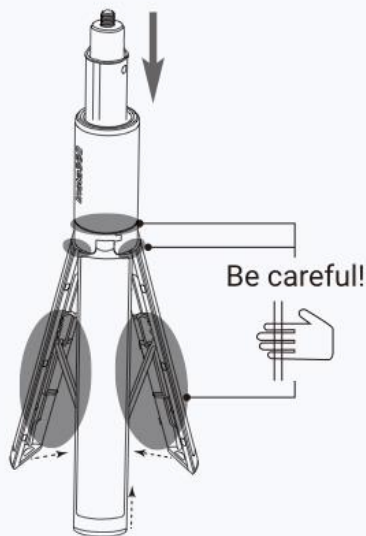

Extending or retracting

Pull to extend, push to retract. Simple really.



Specs

Product Name: Invisible Selfie Stick + Tripod

Main Material: Aluminium alloy, PC, ABS

Color: Black

Top Screw: 1/4 Standard Screw (No screw at the bottom)

Weight: 216g

Retracted Length: 24cm(9.4in)

Extended Length (with Tripod Legs Folded): 105cm (41.3in)

(*This data may have a margin of error of ± 3 cm in length;
 ± 5 g in weight)